



# INSTALLATION INSTRUCTIONS

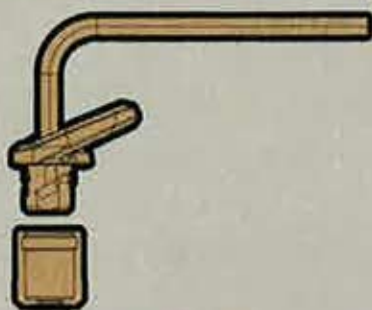



## STEP 1

Using a  $9/64"$  hex wrench, make sure the *Paraclip Adapter Clamp Screw* is loosened enough to allow the *Paraclip Adapter Clamp* to slide completely open.

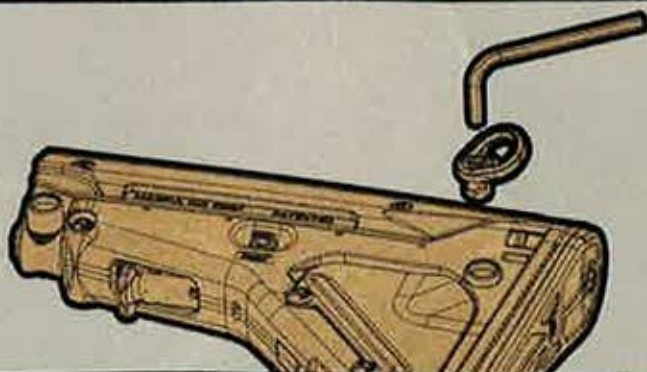

## STEP 2

Insert the *Paraclip Adapter* into the QD socket and orient the *Paraclip Adapter Loop* to the desired position.

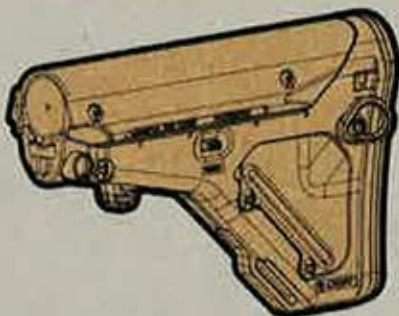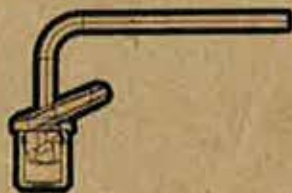

## STEP 3

Hand tighten the *Clamp Screw* using a  $9/64"$  hex wrench. Support the *Paraclip Adapter Loop* to prevent it from rotating as the screw is tightened.