

**MANUALE DI ISTRUZIONI
OWNER'S MANUAL
MANUEL D'UTILISATION
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
MANUAL DEL PROPIETARIO**

SDASS MARTIAL

Italiano	p.	3
English	p.	7
Français	p.	11
Русский	стр.	15
Espanol	p.	19

SAFETY RULES

WARNING: READ THESE SAFETY RULES & OPERATORS MANUAL BEFORE HANDLING YOUR FIREARM

- Never point a firearm at anyone and always keep the muzzle pointed in a safe direction.
- Always treat all firearms as if they are loaded. Don't rely on your gun's "safety".
- Firearms should be unloaded when not in use and stored in a safe and secure location. Keep firearms and ammunition away from children.
- Use correct ammunition. Only use ammunition that exactly matches the caliber or gauge markings on your firearm.
- Always wear ear and eye protection when shooting.
- Before shooting be sure the barrel is clear of obstructions.
- Never load your firearm until you are in a location where it is safe to shoot. Always keep the safety engaged until you are ready to shoot.
- Keep your finger off the trigger while loading or unloading the shotgun.
- If your gun fails to fire, keep it pointed in a safe direction, then unload it carefully avoiding exposure to breach.
- If your gun fires, but the report of recoil or the bang seem weak, unload it and ensure the barrel is not obstructed. In case of doubt please ask an authorized member of the FABARM commercial network (subsidiary or official importer) to check the shotgun. Do not hesitate to contact FABARM S.p.A. for more information.
- Don't alter or modify your gun. Use only genuine parts.
- Clean and maintain the firearm according to the instructions in this booklet.
- Keep your firearm unloaded. Never carry or store a loaded firearm in a building or a vehicle.

ASSEMBLING THE SHOTGUN

1. Hold the weapon, without the barrel, in your hand. The front of the breech should align with the edge of the frame. If it does not, slide the forend forwards or back to adjust the position of the breech. Make sure that the breech bolt is perfectly in flat on the action bar. **(fig.1a) (fig.1b) (fig.1c)**
2. Gently insert the barrel into the frame with the barrel extension inserted between the breech and the frame **(fig.2)**.
3. Push the barrel firmly home into the frame **(fig.3)**.
4. You now need to secure the barrel, a step varying according to the configuration of the shotgun:
 - a- Your weapon does not have a magazine tube extension: in this case, simply screw the magazine cap onto the tube **(fig.4)**.

- b- Your weapon has a magazine tube extension: in this case, put the magazine spring in the tube then place the extension at the end of the spring.
- c- Compress the spring by pressing on the extension until you can screw the extension onto the magazine tube end threading **(fig.5)**.
- d- If your magazine extension has an interface fixed on the barrel, position the attaching interface B-191-A between the barrel and the extension and use a suitable Allen key to tighten the attaching screw **(fig.6)**.
A mark on the extension indicates where to position the interface.

LOADING THE SHOTGUN.

1. Before loading the shotgun, engage the safety by pressing the safety button so that the red line is no longer visible.
2. Press the unlocking lever in front of the trigger guard **(fig.7)**.
3. Slide the forend back to open the shotgun **(fig.8)**.
4. Insert a shotshell into the chamber, through the ejection window **(fig.9)**.
5. Slide the forend forwards. This operation locks the breech bolt inside the barrel.
6. Turn the weapon over then, using your thumb, feed the ammunitions in one by one, pressing down on the carrier to reach the magazine tube **(fig.10)**.

FIRING

1. Aim the shotgun at the target.
2. Take off the safety.
3. Pull the trigger.
4. After firing the first shotshell, slide the forend back to eject the shotshell case you just fired before.
5. Slide the forend forwards to feed a new shotshell into the chamber.
6. Repeat this pumping action after each shot. Release the trigger after each shot and pull it to fire again.
7. After firing the last shotshell, make sure that the weapon is absolutely empty by inspecting the chamber and the magazine tube. You should be able to see the red cap in the magazine tube.

UNLOADING THE SHOTGUN

1. Point the weapon in a safe direction.
2. Engage the safety by pushing on the button.
3. Press the unlocking lever and slide the forend backwards and forwards in an alternating movement. **(fig.11)**

4. Repeat this pumping action while holding the locking lever down with your first finger.
Finally, make sure that the weapon is absolutely empty by inspecting the chamber and the magazine tube.

DISASSEMBLY THE SHOTGUN

1. Set the weapon to the SAFETY ON position and ensure that it is fully unloaded.
2. With the breech bolt closed, unscrew the magazine cap or the magazine tube extension.
 - a. Be careful, if your weapon has an extension, the magazine spring is not retained inside the tube; pay attention when removing the extension and holding back the spring (**fig.12**).
 - b. If your magazine extension has an interface, first remove the attaching interface between the barrel and the extension using the suitable Allen key.
3. Gently remove the barrel (**fig.13**). The barrel ring comes away by sliding on the magazine tube.
4. Push the forend forwards so that the breech bolt assembly comes out of the frame (**fig.14**).
5. Remove the breech bolt from the action bar (**fig.15**).
6. Hold the bolt in one hand and press the firing pin to compress the spring (**fig.16**).
7. Remove the locking pin from the bolt (**fig.17**).
8. You can now remove the firing pin, the locking lug and the spring (**fig.18**).

Do not strip your shotgun to any further stage. This is sufficient for normal maintenance. Any further disassembly should be by a qualified gunsmith.

MAINTENANCE AND CLEANING

The correct maintenance and cleaning of your shotgun will guarantee its long life and maintain the performance of your FABARM weapon.

BARREL: Spray a little FABARM solvent into the barrel and let it stand. Run a cloth impregnated in a little FABARM oil through the barrel always pulling it from the chamber to the muzzle. If necessary, use a bronze brush. Regularly apply oil to the outside of the barrel.

MECHANISM: Spray a little FABARM oil onto the bolt group and the outside of the magazine tube so that a thin film of oil protects the parts of the mechanism while lubricating it.

REASSEMBLY

1. If the locking lug has been removed, start by putting the lug on the bolt (**fig.19**).
2. Place the firing pin and its spring into the bolt then compress it to bring the retaining pin into place (**fig.20**).
3. Put the bolt on the action bar (**fig.21**).
4. Check that the hammer is in the cocked position (**fig.22**), if it is not push it back until it locks into the cocked position.
5. Insert the complete action bar with bolt into the frame, positioning the action bar to face the slides located inside the frame (**fig.23**).
6. Position the front of the breech bolt so that it aligns with the edge of the frame by pushing the forend forwards or backwards (**fig.24**).
7. Continue to assemble, following the instructions given in the "ASSEMBLY THE SHOTGUN "section.



FIG.1a



FIG.1b



FIG.1c

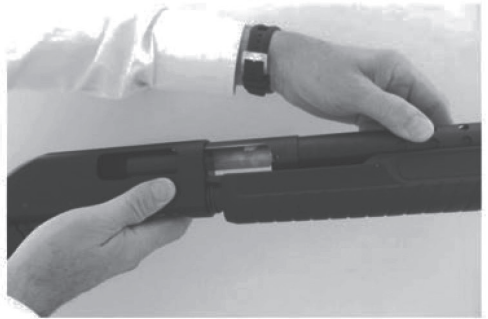


FIG.2

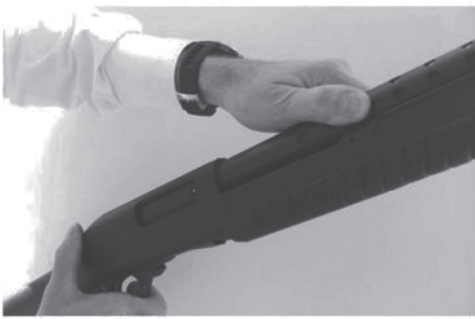


FIG.3



FIG.4



FIG.5



FIG.6



FIG.7



FIG.8



FIG.9



FIG.10



FIG.11



FIG.12



FIG.13



FIG.14



FIG.15



FIG.16



FIG.17



FIG.18

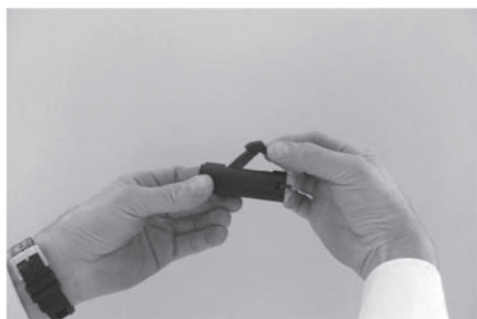


FIG.19



FIG.20



FIG.21



FIG.22

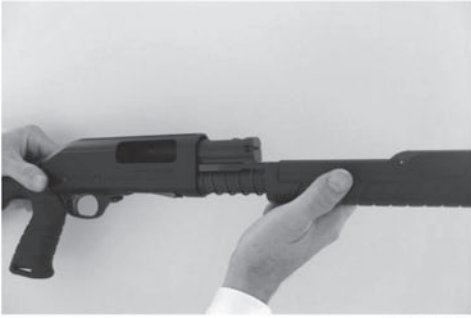


FIG.23



FIG.24



FABARM S.p.A.
Via Averolda, 31
25039 TRAVAGLIATO
(Brescia) ITALY
Fax (39) 030 6863684

www.fabarm.com